


MP PUMPS SERVICE PARTS LIST

• Engine Driven Pumps
Kohler / Wisconsin 8 HP
FOR TECUMSEH 8 HP, SEE FORM 7063

FLOMAX 10 2" Pipe Size
FLOMAX 15 3" Pipe Size

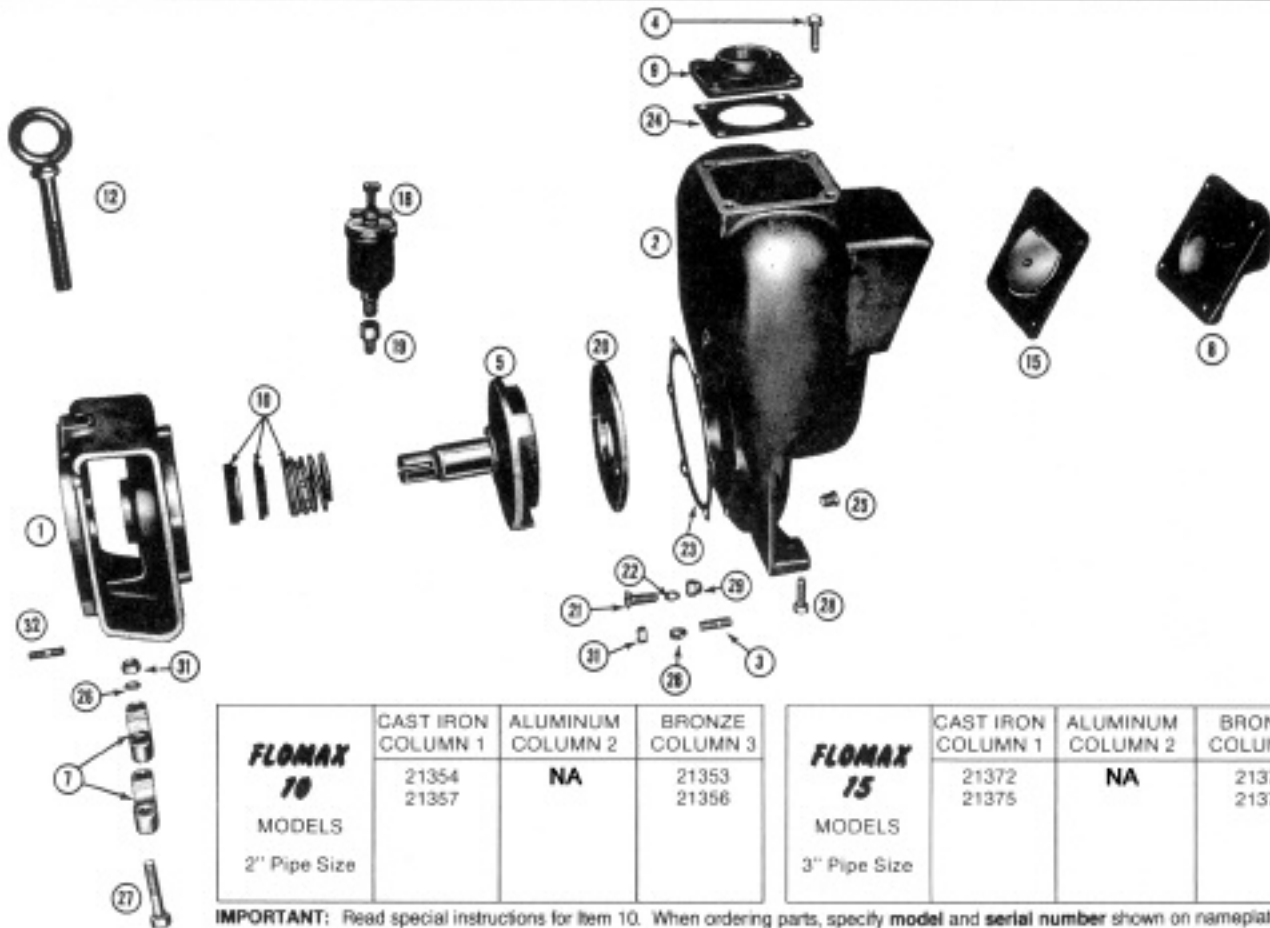

IMPORTANT: Read special instructions for item 10. When ordering parts, specify **model** and **serial number** shown on nameplate.
N/S means "not shown" in exploded view of parts.

ITEM	PART NO.	DESCRIPTION	QUANTITY REQUIRED PER MODEL		
			COLUMN 1	COLUMN 2	COLUMN 3
HOUSING					
	23025	Housing Assembly - Cast Iron - Inc:	1		
2		Housing - Cast Iron	1		
3	21260	Stud - S.S. - Adaptor to Housing - 3/8"	6		
4	21291	Cap Screw S.S. - 3/8"	8		
N/S	22379	Pipe Plug - Cast Iron - 1" NPT	1		
25	21267	Drain Plug - 1/4" NPT	1		
	23033	Housing Assembly - Aluminum - Inc:		1	
2	NA	Housing - Aluminum		1	
3	21260	Stud - S.S. - Adaptor to Housing - 3/8"		6	
4	21291	Cap Screw S.S. - 3/8"		8	
N/S	22380	Pipe Plug - Aluminum - 1" NPT		1	
25	21267	Drain Plug - 1/4" NPT		1	
	23034	Housing Assembly - Bronze - Inc:			1
2		Housing - Bronze			1
3	21260	Stud - S.S. - Adaptor to Housing - 3/8"			6
4	21291	Cap Screw S.S. - 3/8"			8
N/S	22378	Pipe Plug - Bronze - 1" NPT			1
25	21267	Drain Plug - 1/4" NPT			1
31	21268	Hex Nut - S.S. - 3/8"	16	16	16
		2 - Frame to Housing			
		6 - Adaptor to Housing			
		4 - Inlet Flange			
		4 - Outlet Flange			



MP PUMPS, INC.

34800 BENNETT • FRASER, MI 48026-1686
(586) 293-8240 • FAX (586) 293-8469
(800) 563-8006 • www.mppumps.com

FORM 7007-A

PRINTED IN U.S.A.

ITEM	PART NO.	DESCRIPTION	QUANTITY REQUIRED PER MODEL		
			COLUMN 1	COLUMN 2	COLUMN 3
26	21266	Lockwasher - S.S. - 3/8" 2 - Frame to Housing 6 - Adaptor to Housing 4 - Inlet Flange 4 - Outlet Flange	16	16	16
15	23040	Flapper Assembly	1	1	1
23	22240	Gasket - Housing to Adaptor	4	4	4
24	22358	Gasket - Outlet Flange	1	1	1
FLANGE					
8	22369	Flange - Inlet - Cast Iron - 2"	1		
8	NA	Flange - Inlet - Aluminum - 2"		1	
8	22368	Flange - Inlet - Br. - 2"			1
8	22468	Flange - Inlet - Cast Iron - 3"	1		
8	NA	Flange - Inlet - Aluminum - 3"		1	
8	22467	Flange - Inlet - Br. - 3"			1
9	22372	Flange - Outlet - Cast Iron - 2"	1		
9	NA	Flange - Outlet - Aluminum - 2"		1	
9	22371	Flange - Outlet - Br. - 2"			1
9	22471	Flange - Outlet - Cast Iron - 3"	1		
9	NA	Flange - Outlet - Aluminum - 3"		1	
9	22470	Flange - Outlet - Br. - 3"			1
WEAR PLATE					
	22376	Wear Plate Assembly - Steel - Inc. Wear Plate - Steel	1		
20		Flat Head Screw - S.S. - 3/8"	1		
21	21262	Flat Head Screw - S.S. - 3/8"	2		
22	21271	Annular Gasket - 5/8"	2		
	22374	Wear Plate Assembly - Aluminum - Inc. Wear Plate - Aluminum		1	
20		Flat Head Screw - S.S. - 3/8"		1	
21	21262	Flat Head Screw - S.S. - 3/8"		2	
22	21271	Annular Gasket - 5/8"		2	
	22375	Wear Plate Assembly - Br. - Inc. Wear Plate - Br.			1
20		Flat Head Screw - S.S. - 3/8"			1
21	21262	Flat Head Screw - S.S. - 3/8"			2
22	21271	Annular Gasket - 5/8"			2
29	21263	Acorn Nut - S.S. - Wear Plate - 3/8"	2	2	2
IMPELLER					
5	23038	Impeller Assembly - Cast Iron	1		
5	23036	Impeller Assembly - Aluminum		1	
5	23037	Impeller Assembly - Br.			1
5	23902	Impeller Assembly - Stainless Steel - Optional			
CLAMP					
	23039	Impeller Clamp Assembly - Inc. Clamp	1	1	1
7		Lockwasher - S.S. - 3/8"	2	2	2
26	21266	Lockwasher - S.S. - 3/8"	2	2	2
27	21269	Capscrew - S.S. - 3/8"	2	2	2
31	21268	Hex Nut - S.S. - 3/8"	2	2	2
SEAL					
Be sure you specify whether you want the self-lubricated seal or the grease-lubricated seal. If you are changing from a self-lubricated seal to a grease-lubricated seal, you must also order Item 18, Part 22313, and Item 19, Part 22314.					
10	22361	Seal Assembly - Self-lubricated - Inc.	1	1	1
*10	22395	Seal Assembly - Grease-lubricated	1	1	
18	22313	Grease Cup	1	1	
19	22314	Grease Cup Adaptor	1	1	
ADAPTOR					
1	22348	Adaptor - Cast Iron	1		
1	22346	Adaptor - Aluminum		1	
1	22347	Adaptor - Bronze			1
32	21261	Stud - S.S. - Engine to Adaptor - 3/8"	4	4	4
31	21268	Hex Nut - S.S. - 3/8"	4	4	4
26	21266	Lockwasher - S.S. - 3/8"	4	4	4
12	22460	Lifting Eye	1	1	1
N/S	22461	Hex Nut - Steel - 5/8"	1	1	1
BASE					
N/S	22500	Base	1	1	1
N/S	21268	Hex Nut - S.S. - Engine to Base - 3/8"	4	4	4
N/S	21270	Capscrew - S.S. - Engine to Base - 3/8"	4	4	4
N/S	21238	Lockwasher - S.S. - Engine to Base - 5/16"	4	4	4
28	21270	Capscrew - S.S. - Housing to Base - 3/8"	2	2	2

*Optional for Special Applications



MP PUMPS, INC.

34800 BENNETT • FRASER, MI 48026-1686
(586) 293-8240 • FAX (586) 293-8469
(800) 563-8006 • www.mppumps.com

FORM 7007-A

PRINTED IN U.S.A.