


# Pump Chamber/Sand Filter/Timed Dosing Control SJE-Rhombus® Type PS

## Installation Instructions and Operation/Troubleshooting Manual

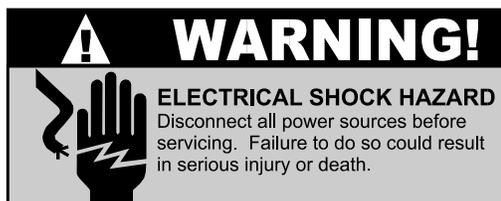

**Warranty void if panel is modified.**

**Call factory with servicing questions:**

**1-800-RHOMBUS**

**(1-800-746-6287)**

Manufactured by:

**SJE**  
**Rhombus**  
CONTROLS

22650 County Highway 6 ■ P.O. Box 1708  
Detroit Lakes, Minnesota 56502 USA  
1-888-DIAL-SJE (1-888-342-5753)  
Phone: 218-847-1317 ■ Fax: 218-847-4617  
E-mail: sje@sjerhombus.com  
Website: www.sjerhombus.com

©SJE-Rhombus  
Printed in USA  
PN1008690B • Rev 10/00

**This control panel must be installed and serviced by a licensed electrician in accordance with the National Electric Code NFPA-70, state and local electrical codes.**

All conduit running from the sump or tank to the control panel must be sealed with conduit sealant to prevent moisture or gases from entering the panel. **NEMA 4X enclosures are for indoor or outdoor use**, primarily to provide a degree of protection against corrosion, wind-blown dust and rain, splashing water and hose-directed water. **Cable connectors must be liquid-tight in NEMA 4X enclosures.**

## Installation

Type PS control panels are designed to control both pump chamber and sand filter pumps.

**NOTE: Options ordered may affect the number of floats and their functions. Please reference the schematic provided with the control panel.**

### Installation of Floats

**CAUTION:** If control switch cables are not wired and mounted in the correct order, the pump system will not function properly.

**WARNING -** Turn off all power before installing floats. Failure to do so could result in serious or fatal electrical shock.

1. Use float label kit to identify and label cables on both float and stripped ends. See schematic for float options.
2. Determine your normal operating level, as illustrated in **Figures 1-6**.
3. Mount float switches at appropriate levels as illustrated in **Figure 7**. Be sure that floats have free range of motion without touching each other, or other equipment in the basin.
4. For mounting clamp installation: place the cord into the clamp as shown in **Figure 7**. Locate the clamp at the desired activation level and secure the clamp to the discharge pipe as shown in **Figure 7**.

**NOTE:** Do not install cord under hose clamp.

5. Tighten the hose clamp using a screwdriver. Over tightening may result in damage to the plastic clamp. Make sure the float cable is not allowed to touch the excess hose clamp band during operation.

**NOTE:** All hose clamp components are made of 18-8 stainless steel material. See your SJE-Rhombus® supplier for replacements.

6. If using an optional redundant off float, mount slightly below the low level cutout float, but above the pump as illustrated in **Figures 2 & 4**.
7. When mounting a sand filter ON/OFF float or an optional timer override float, position it at a level in the basin as shown in **Figures 3-6**.


# Installation Instructions

## Mounting the Control Panel


1. Determine mounting location for panel. If distance exceeds the length of either the float switch cables or the pump power cables, splicing will be required. For outdoor or wet installation, we recommend the use of an SJE-Rhombus® liquid-tight junction box with liquid-tight connectors to make required connections. **You must use conduit sealant to prevent moisture or gases from entering the panel.**
  2. Mount control panel with mounting flanges furnished.
  3. Determine conduit entrance locations on control panel. Check local codes and schematic for the number of power circuits required.  
**CAUTION:** Be sure the proper power supply voltage, amperage, and phase meet the requirements of the pump motor being installed. If in doubt, see the pump identification plate for electrical requirements.
  4. Drill proper size holes for type of connectors being used.  
**CAUTION:** If using conduit, be sure that it is of adequate size to pull the pump and switch cables through.
  5. Attach cable connectors and/or conduit connectors to control panel.
  6. Determine location for mounting junction box according to local code requirements. **Do not** mount the junction box inside the sump or basin.
  7. Mount junction box to proper support.
  8. Run conduit to junction box. Drill proper size holes for the type of conduit used.
  9. Identify and label each wire before pulling through conduit into control panel and junction box. Make wire splice connections at junction box.
  10. Firmly tighten all fittings on junction box.
  11. If a junction box is not required, pull cables through conduit into control panel.
  12. Connect pump wires and float switch cables to the proper terminals as seen in **Figure 8**.
  13. Connect “power-in” conductors to proper locations: **see Figure 8**.
- NOTE:** It is the recommendation of the factory to use separate pump and control/alarm power sources.

**FOR INSTALLATION WITHOUT A SPLICE,  
GO TO STEP 11; FOR INSTALLATION REQUIRING  
A SPLICE, FOLLOW STEPS 6-10.**


**VERIFY CORRECT OPERATION OF CONTROL PANEL  
AFTER INSTALLATION IS COMPLETE.**

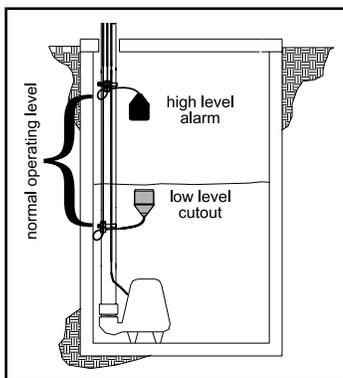


**FIGURE 1 -  
Pump chamber  
two float system**

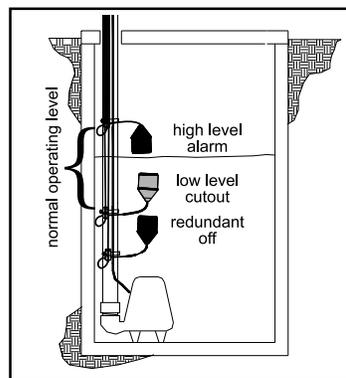

**FIGURE 2 -  
Pump chamber  
three float system  
with redundant off**

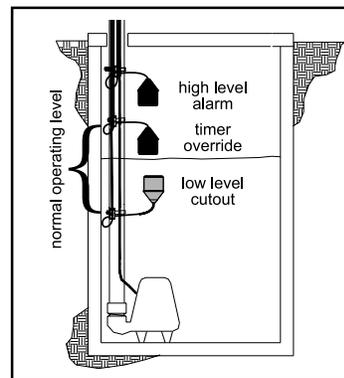


**FIGURE 3 -  
Pump chamber  
three float system  
with timer override**

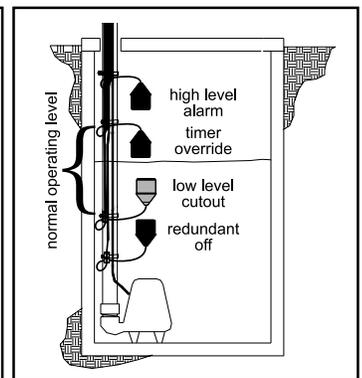


**FIGURE 4 -  
Pump chamber  
four float system**

# Installation Instructions


**FIGURE 5 - Sand filter two float system**

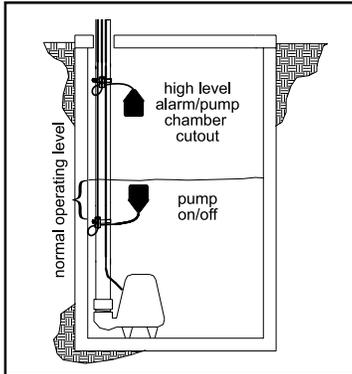



**FIGURE 6 - Sand filter redundant off system**

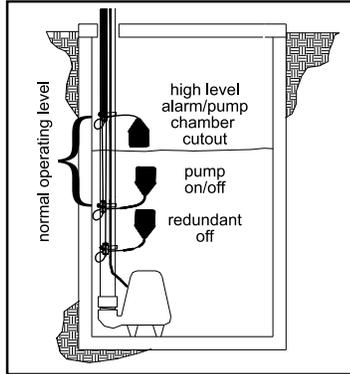

**FIGURE 8 - Field Wiring Diagram**

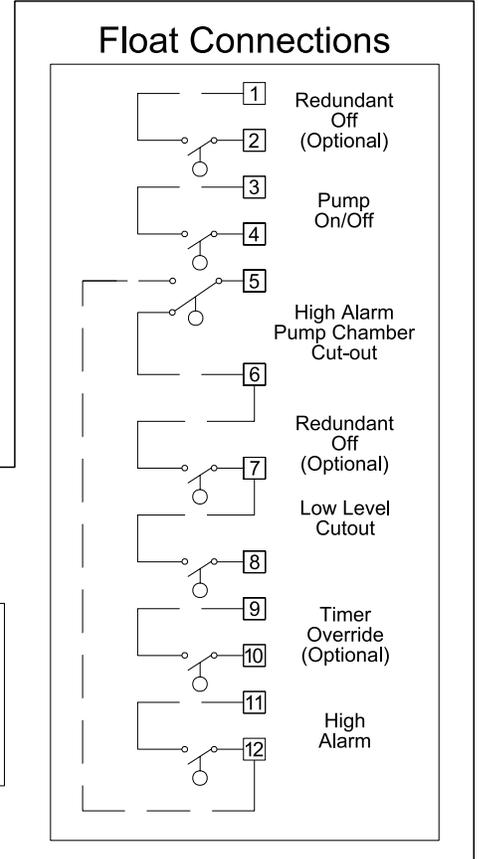

**FIGURE 7 - Mounting clamp detail**

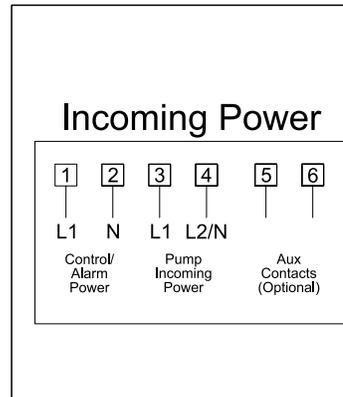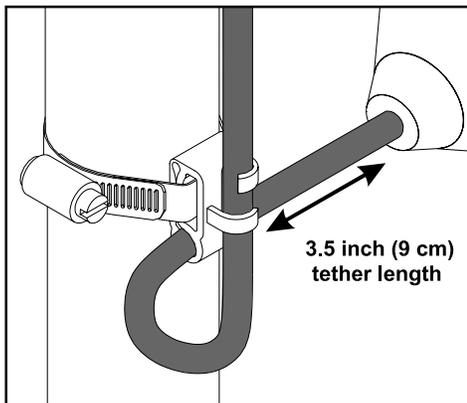


## Setting the timer

Remove the timer by clipping the tie strap and pulling it straight out of the socket.

1. Determine the pump "on & off" time and turn the adjustment screw (1) so that the most appropriate range of numbers (usable for both the on and off cycles) is visible in the windows on the dial face.
2. Adjust the off time range selector (2) to the appropriate period. (e.g.: minutes).
3. Adjust the outer dial (3) so the green pointer indicates the off time period required. (e.g.:15)
4. Adjust the on timer range selector (4) to the appropriate period (e.g.: minutes).
5. Adjust the inner dial (5) so the red pointer indicates the on time period required. (e.g.: 5)
6. When setting is complete, place the timer back in the socket.
7. In the example shown, the pump would be off for 15 minutes and then on for 5 minutes. This cycle would continue as long as there was enough liquid in the tank to float the low level cutoff switch.


**FIGURE 9 - Timer detail**

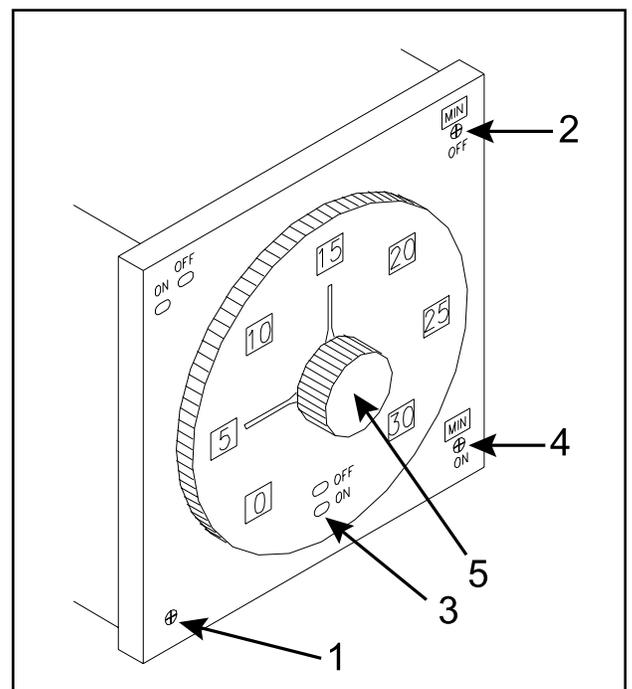

**NOTE: "OFF" time is cycled first.**

# Operations & Troubleshooting

PS series control panels control both pump chamber and sand filter pumps. The pump chamber is available for use with two, three, or four float combinations. In a two float system, one float in the tank is the “low level cutout” float while the other is a “high level alarm” float. The normal operating level should be between the “low level cutout” position and the “high level alarm” position. A three float system adds either a “redundant off” float which is positioned slightly below the “low level cutout” grey float, but above the pump. The normal operating level shall be between the “low level cutout” position and the “high level alarm” position or a timer override float. The “timer override” float gives you the option of pumping from the basin while the timer is in the “off” cycle. It is only intended for times of abnormally high liquid level intrushes. The normal operating level should be between the “low level cutout” float and the “timer override” float. A four float system includes a “redundant off” float, a “low level cutout” float, a “timer override” float and a “high level alarm” float. The pump chamber control begins by timing the “off” sequence when the “low level cutout” float is activated. Once the timer completes the “off” sequence, the timer will start the pump and continue to run until the programmed “on” sequence is complete. At this point the “off” sequence begins timing again and the cycle repeats.

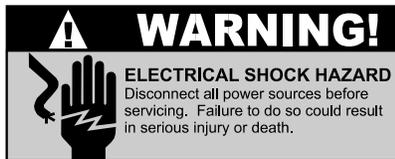

The sand filter system consists of two floats: a pump “on/off” float and the sand filter “high level alarm” float. The “high level alarm” float activates the audio/visual alarm and stops the pump chamber pump from dosing the sand filter.

## Alarm Light

Activate the alarm float. The alarm light should turn on. If not, replace the bulb with that of the same type.

## Alarm Horn

Activate the alarm float. The alarm horn should turn on. If not, replace the horn with that of the same type.

## Float Controls

1. Check the floats during their entire range of operation. Clean, adjust, or replace damaged floats.
2. Measure the float resistance to determine if the float is operating properly. To measure float resistance:
  - a. Isolate the float by disconnecting one or both of the float leads from the float terminals.
  - b. Place one ohmmeter lead on one of the float wires, and the other ohmmeter lead on the other float wire.
  - c. Set the ohmmeter dial to read ohms and place on the R X 1 scale. With the float in the “off” position, the scale should read infinity (high resistance), if not replace the float. With the float in the “on” position, the scale should read close to 0, if not replace the float. **Readings may vary depending on the accuracy of the measuring device.**

## Magnetic Contactor Coil

To measure the coil, disconnect one of the coil leads. Measure the coil resistance by setting the ohmmeter on the R X 1 scale. A defective coil will read zero indicating a short, or infinity (high resistance) indicating an opened coil. Replace defective contactor.

## Fuses

To check the continuity of the fuse, pull the fuse out of the fuse holder. With the ohmmeter on the R X 1 scale, measure resistance. A reading of infinity (high resistance) indicates a blown fuse that must be replaced with a fuse of the same type, voltage, and amp rating.

# SJE-Rhombus® Three-Year Limited Warranty

**SJE-RHOMBUS®** warrants to the original consumer that this product shall be free of manufacturing defects for three years after the date of consumer purchase. During that time period and subject to the conditions set forth below, **SJE-RHOMBUS®** will repair or replace, for the original consumer, any component which proves to be defective due to defective materials or workmanship of **SJE-RHOMBUS®**.

## ELECTRICAL WIRING AND SERVICING OF THIS PRODUCT MUST BE PERFORMED BY A LICENSED ELECTRICIAN.

**THIS WARRANTY DOES NOT APPLY:** (A) to damage due to lighting or conditions beyond the control of **SJE-RHOMBUS®**; (B) to defects or malfunctions resulting from failure to properly install, operate or maintain the unit in accordance with printed instructions provided; (C) to failures resulting from abuse, misuse, accident, or negligence; (D) to units which are not installed in accordance with applicable local codes, ordinances, or accepted trade practices, and (E) to units repaired and/or modified without prior authorization from **SJE-RHOMBUS®**.

*Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*

**TO OBTAIN WARRANTY SERVICE:** The consumer shall assume all responsibility and expense for removal, reinstallation, and freight. Any item to be repaired or replaced under this warranty must be returned to **SJE-RHOMBUS®**, or such place as designated by **SJE-RHOMBUS®**.

**ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS ARE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. SJE-RHOMBUS® SHALL NOT, IN ANY MANNER, BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AS A RESULT OF A BREACH OF THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY.**