

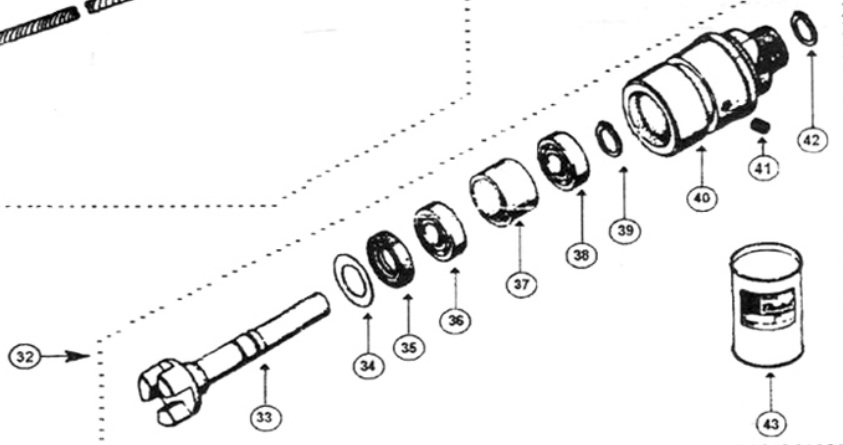
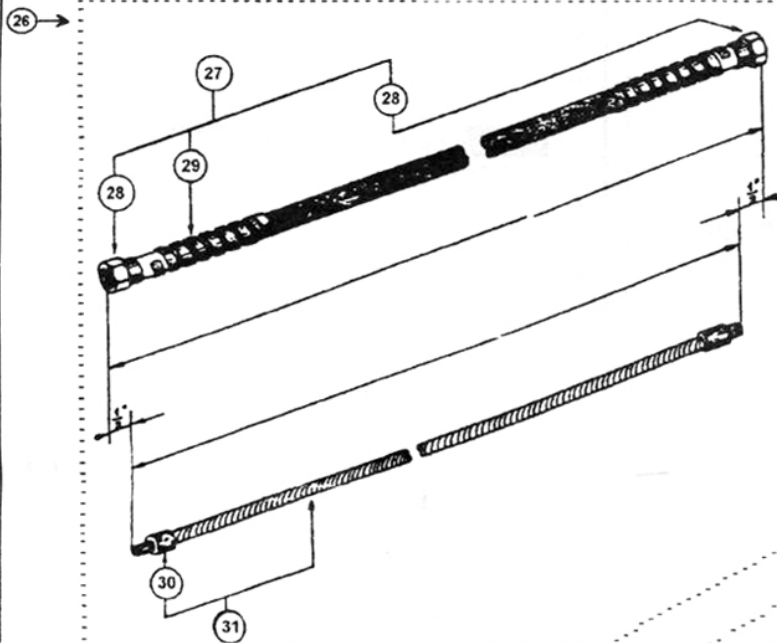


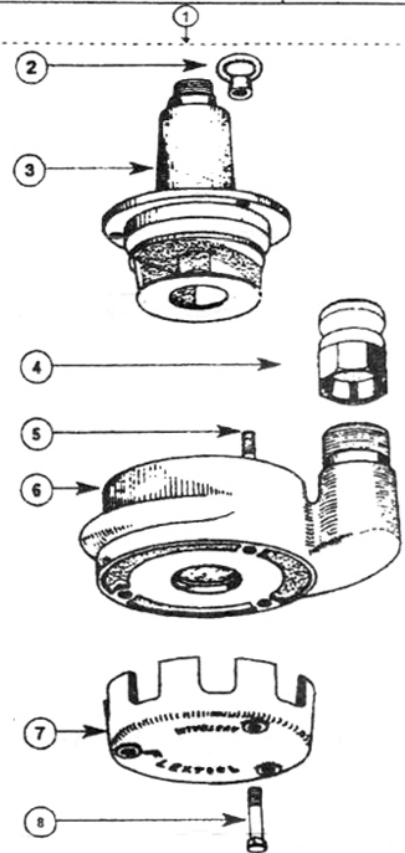

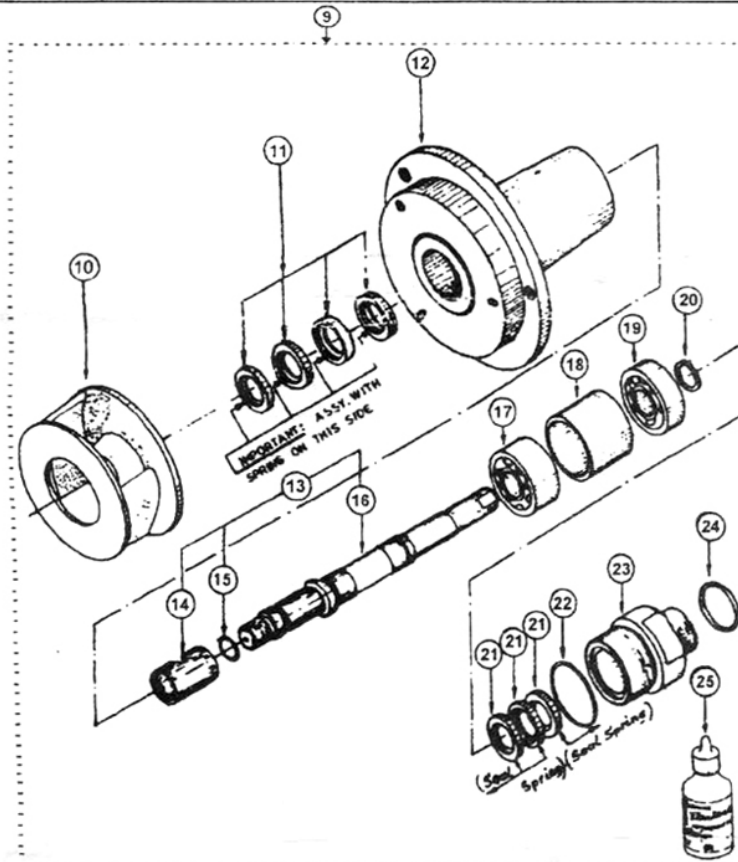

Service Sheet F02827

Trash Pump - General Purpose

Model P212G

Standard Flexshaft (12 x 32 mm dia)Replacement Parts List

Length	Part No.
3 m	F01860
6 m	F01836
9 m	F02255

1 F06127 Pump Head Assy - P212

2	F06170	Eye Nut	1
3	F08498	Pump Head Top Assy	1
4	F07469	Pump Adaptor	1
5	F06303	Stud	1
6	F06255	Body Assy - Cast	1
7	F06169	Strainer	1
8	F06902	Bolt	1

9 F08498 Pump Head Top Assy

10	F06476	Impeller	1
11	F08494	Seal	4
12	F06128	Housing Assy	1
13	F08488	Spindle Assy	1
14	F08490	Sleeve	1
15	F08491	O Ring	1
16	F08489	Spindle	1
17	F06180	Bearing	1
18	F06130	Spacer	1
19	F06135	Bearing	1
20	F04504	Circlip	1
21	F04230	Seal	3
22	F06490	O Ring	1
23	F06131	Adaptor - Housing	1
24	F07502	O Ring	1
25	F06700	Oil	1

26 F01970 Flexshaft Assy - 6m.

27	F01835	Casing Assy	1
28	F06937	Ferrule Assy	1
29	F01703	Spring - Outer	1
30	F09065	Core End	1
31	F04733	Core Assy	1

32 F06572 Coupling Assy - #2P

33	F06784	Spindle Assy	1
34	F07400	Washer - PTFE	1
35	F06573	Seal	1
36	F06764	Bearing	1
37	F06782	Spacer	1
38	F06143	Bearing	1
39	F04504	Circlip	1
40	F06575	Bearing Housing	1
41	F04571	Screw - S Set	1
42	F07502	O Ring	1
43	F07623	Grease	1

Service Kits**F08541 Housing Service Kit**

11	F08494	Seal	4
14	F08490	Sleeve	1
15	F08491	O Ring	1
17	F06180	Bearing	1
19	F06135	Bearing	1
20	F04504	Circlip	1
21	F04230	Seal	3
22	F06490	O Ring	1
24	F07502	O Ring	1

F08601 Housing Seal Kit

11	F08494	Seal	4
14	F08490	Sleeve	1
15	F08491	O Ring	1

F08411 Coupling Service Kit

34	F07400	Washer - PTFE	1
35	F06573	Seal	1
36	F06764	Bearing	1
38	F06143	Bearing	1
39	F04504	Circlip	1
42	F07502	O Ring	1

Complete Assemblies

9	F08498	Pump Head Top Assy	1
6	F06255	Body Assy - P212	1
1	F06127	Pump Head Assy	1
12	F06128	Housing Assy	1
16	F08488	Spindle Assy	1
26	F01970	Shaft Assy	1
32	F06572	Coupling Assy	1

26 F02351 Flexshaft Assy - 3m.

27	F01859	Casing Assy	1
28	F06937	Ferrule Assy	1
29	F01703	Spring - Outer	1
30	F09065	Core End	1
31	F08889	Core Assy	1

26 F02256 Flexshaft Assy - 9m.

27	F02257	Casing Assy	1
28	F06937	Ferrule Assy	1
29	F01703	Spring - Outer	1
30	F09065	Core End	1
31	F07465	Core Assy	1