


1/4" MODELS

MAINTENANCE MANUAL

CHECK VALVE, GASKET and O-RING MAINTENANCE

1. Flush the pump to be certain all corrosives or hazardous materials are removed. Remove suction, discharge and air supply lines.
2. Remove the 1/4-20 nuts (item 28) and slide the six cap screws (item 27) that hold the pump together out of the pump. Remove the #8 screws (item 5) from the left and right manifold plates (items 1 and 19 respectively) and inspect the gaskets (item 2). The suction (or lower) check valves are an integral part of the left and right chambers and should not be dismantled. If replacement of the valve seats is necessary, items 6 and 8 which contain the valves must be replaced. The upper discharge valve disks (item 3) are not sealed into the chambers and may be inspected for wear. If any components are worn or scratched, replace. Note: Due to the distortion of gaskets under pressure, gaskets may need to be replaced after pump has been disassembled to assure a positive seal.
3. To inspect manifold tube o-rings (item 17) remove right chamber (item 18).
4. Both diaphragms (item 9) can be inspected after removing the right and left chamber (item 6). If diaphragms appear worn or ruptured go to step 7. If diaphragms do not need replacing, proceed with steps 5 and 6.
5. To reassemble: Insert the discharge valve disks into place. Press gaskets into groove in chambers.

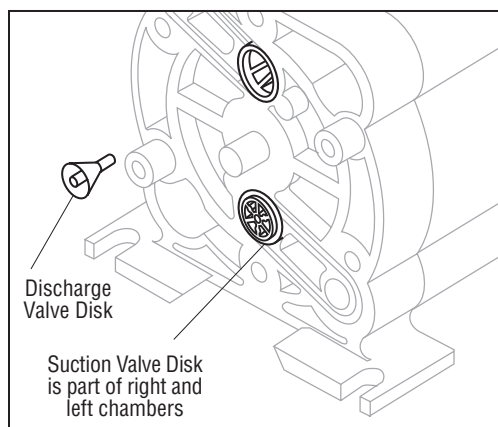

6. Align left and right manifolds on the bosses of the chambers. Secure to each chamber with the (5) #8 screws. Slide left chamber tubes through intermediate. Position o-rings on the end of the tubes. Lubricate o-rings and right chamber holes. Slide a flat washer (item 26) onto each of the (6) capscrews and insert through the entire assembly. Secure with a flat washer (item 26), and a tension washer (item 29) under each nut. Tighten to 5 ft-lbs (6,8N/m). Apply torque evenly.


DIAPHRAGM MAINTENANCE

7. Remove outer diaphragm plates (item 7) by holding one diaphragm plate and twisting off the other plate.
8. The diaphragm o-ring (item 8) is used only with Teflon diaphragms. Replace diaphragms if ruptured or worn. Inspect inner diaphragm plates (item 10). If diaphragm rod needs replacing go to step 10.

9. If no further inspection is necessary reassemble inner diaphragm plates and diaphragms onto stud of outer diaphragm plates and screw each assembly into diaphragm rod. (Make sure optional diaphragm o-ring is in position in the o-ring groove on either side of the intermediate if using Teflon diaphragms. When positioning teflon diaphragms make sure that the concave side is facing the wet ends of pump.)
Tighten outer diaphragm plates to 40 in-lbs (4,5 N/m)
Reassemble pump according to steps 5 and 6.

AIR VALVE and DIAPHRAGM ROD MAINTENANCE

10. To remove the diaphragm rod twist the two rod halves apart by using a 7/16" wrench on the flats at the end of each half. Pull each half out of the pump. Inspect for corrosion.
11. To inspect diaphragm rod lip seals (item 14) remove the two self tapping screws (item 12) from the retaining plates (item 13). Gently remove lip seals and inspect for damage. To reassemble, lubricate diaphragm rod lip seals (item 14) and insert into bore with the u-cup portion facing inward. Note: Since the diaphragm rod passes through the spring clip assembly (item 23), spring clip assembly must be removed prior to reinsertion of the diaphragm rod into bore in intermediate.
12. To remove spring clip assembly firmly pull air valve plug (item 25) from pump.
13. Inspect spring clip assembly and shuttle (item 22) for damage. Surface of intermediate around air ports and flat surface of shuttle must be smooth, no scratches or debris. Replace or clean if necessary.
14. Attach retainer plate with flat surface toward lip seals. Do not overtighten self-tapping screws.
15. To reinsert diaphragm rod halves, drop shuttle into intermediate over ports. Groove in shuttle should be aligned vertically in pump and should face outward. Insert spring side of spring clip assembly into groove in shuttle. At this point the assembly is not affixed to anything. Press down as shown below to insert long half of diaphragm rod (item 16) through spring clip assembly and position under spring ends.

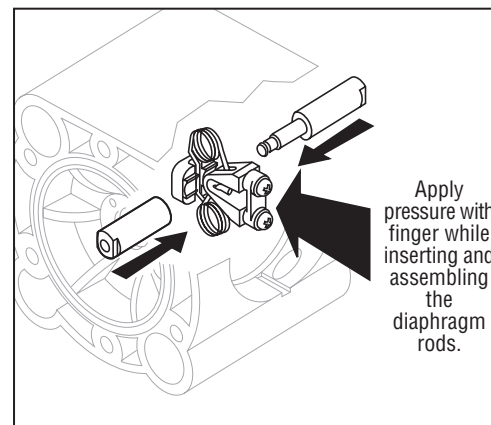

16. While continuing to apply pressure to spring clip assembly, screw short half of diaphragm rod (item 11) into long half.
17. Follow instructions for assembly of diaphragms in step 9. Final tightening of diaphragm rod will occur when outer diaphragm plates are tightened.
18. Make sure valve plug o-ring (item 21) is well lubed, position o-ring and press air valve plug into the intermediate making sure that tab and indentation are aligned. If o-ring is not well lubricated, it will not permit reinsertion.

19. Follow procedure for final assembly of pump in step 6.

SPECIFICATIONS

CAPACITY:

Adjustable . . . 0 to 4.3 GPM (16,3 liters/min.)

MAXIMUM TEMPERATURE:

KN-025 Model 200°F (93°C)

Other Models 150°F (66°C)

MAXIMUM AIR PRESSURE:

All Models 100 PSI (6,8 bars)

DRY LIFT CAPACITY @ 100PSI (6,8 BARS):

Other Models 17 ft. (5 meters)

WEIGHT:

KN-025 Model 7 lbs. (3,2 kg.)

Other Models 5 lbs. (2,3 kg.)

Maximum Solids: 1/16" or (1,6 mm)

AIR SUPPLY:

Inlet 1/4" NPSF Female


Outlet 1/4" NPSF Female

Fluid Inlet/Discharge: 1/4" NPSF


* Geolast properties are similar to that of Nitrile (Buna-N)

DIMENSIONS


Dimensions in inches and (mm)

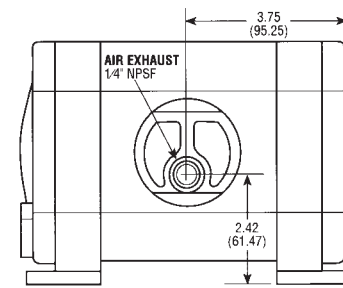


Rear View

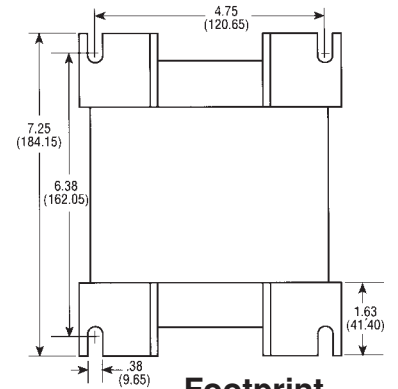


Footprint

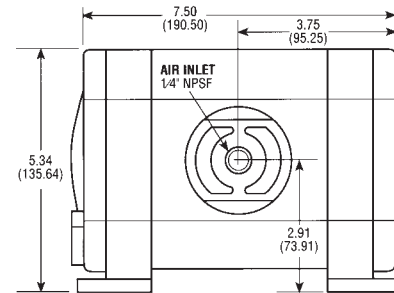

Front View

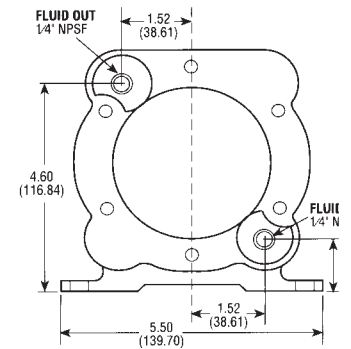

Side View

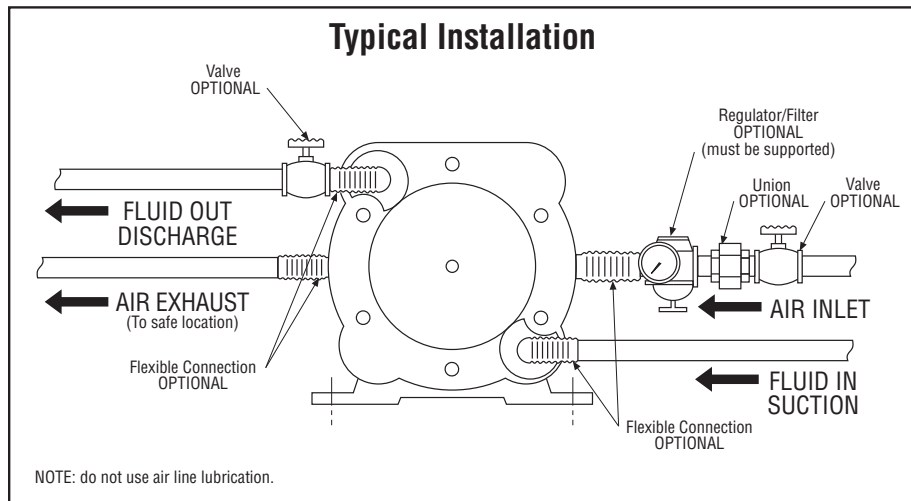

PERFORMANCE CURVE

(Based on water-flooded suction)

