

## Oil Transfer Pump

311305A

***For pumping non-flammable fluids, including motor oils, hydraulic fluid, and antifreeze only. Do not use to pump water.***

**Model 260100, 4.25 gpm (16.1 lpm), 12 VDC**

**Model 260101, 4.25 gpm (16.1 lpm), 115 VAC**

**Model 260102, 8.0 gpm (30.3 lpm), 115 VAC**

**Model 260104, 4.25 gpm (16.1 lpm), 230 VAC**

*65 psi (0.45 MPa, 4.5 bar) Maximum Working Pressure*




### **Important Safety Instructions**

Read all warnings and instructions in this manual. Save these instructions.

## Contents

<b>Warnings</b>	<b>2</b>
<b>Installation</b>	<b>4</b>
Mounting Pump on Barrel or Tank	4
Mounting Hose and Nozzle	4
Electrical Installation	
115 VAC and 230 VAC	5
Electrical Installation	
12 VDC	5
<b>Operation</b>	<b>5</b>
Pressure Relief Procedure	5
<b>Troubleshooting</b>	<b>6</b>
<b>Parts</b>	<b>8</b>
<b>Technical Data</b>	<b>10</b>
<b>Graco Standard Warranty</b>	<b>12</b>
<b>Graco Information</b>	<b>12</b>

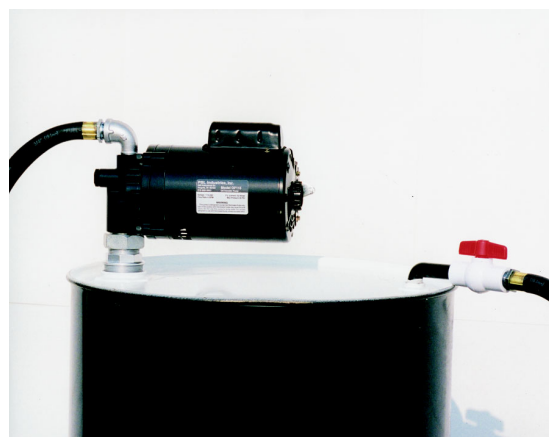





PROVEN QUALITY. LEADING TECHNOLOGY.







# Warnings

The following general warnings are for the setup, use, grounding, maintenance, and repair of this equipment. Additional, more specific warnings may be found throughout the body of this manual where applicable. *Symbols appearing in the body of the manual refer to these general warnings. When these symbols appear throughout the manual, refer back to these pages for a description of the specific hazard.*

 <b>WARNING</b>	
	<p><b>FIRE AND EXPLOSION HAZARD</b></p> <p>When flammable fluids are present in the work area, such as gasoline and windshield wiper fluid, be aware that flammable fumes can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> <li>• Use equipment only in well ventilated area.</li> <li>• Eliminate all ignition sources, such as cigarettes and portable electric lamps.</li> <li>• Keep work area free of debris, including rags and spilled or open containers of solvent and gasoline.</li> <li>• Do not plug or unplug power cords or turn lights on or off when flammable fumes are present.</li> <li>• Ground all equipment in the work area.</li> <li>• Use only grounded hoses.</li> <li>• If there is static sparking or you feel a shock, <b>stop operation immediately</b>. Do not use equipment until you identify and correct the problem.</li> <li>• Keep a fire extinguisher in the work area.</li> </ul>
	<p><b>ELECTRIC SHOCK HAZARD</b></p> <p>Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> <li>• Turn off and disconnect power at main switch before disconnecting any cables and before servicing equipment.</li> <li>• Connect only to grounded power source.</li> <li>• All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.</li> </ul>
	<p><b>PERSONAL PROTECTIVE EQUIPMENT</b></p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> <li>• Protective eyewear</li> <li>• Clothing and respirator as recommended by the fluid and solvent manufacturer</li> <li>• Gloves</li> <li>• Hearing protection</li> </ul>



 <b>WARNING</b>	
	<p><b>PRESSURIZED EQUIPMENT HAZARD</b></p> <p>Fluid from the gun/dispense valve, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.</p> <ul style="list-style-type: none"> <li>• Follow <b>Pressure Relief Procedure</b> in this manual, when you stop spraying and before cleaning, checking, or servicing equipment.</li> <li>• Tighten all fluid connections before operating the equipment.</li> <li>• Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately.</li> </ul>
	<p><b>EQUIPMENT MISUSE HAZARD</b></p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> <li>• Do not operate the unit when fatigued or under the influence of drugs or alcohol.</li> <li>• Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See <b>Technical Data</b> in all equipment manuals.</li> <li>• Use fluids and solvents that are compatible with equipment wetted parts. See <b>Technical Data</b> in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS forms from distributor or retailer.</li> <li>• Check equipment daily. Repair or replace worn or damaged parts immediately with genuine Graco replacement parts only.</li> <li>• Do not alter or modify equipment.</li> <li>• Use equipment only for its intended purpose. Call your Graco distributor for information.</li> <li>• Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.</li> <li>• Do not kink or over bend hoses or use hoses to pull equipment.</li> <li>• Keep children and animals away from work area.</li> <li>• Comply with all applicable safety regulations.</li> </ul>
	<p><b>BURN HAZARD</b></p> <p>Equipment surfaces and fluid that's heated can become very hot during operation. To avoid severe burns, do not touch hot fluid or equipment. Wait until equipment/fluid has cooled completely.</p>



# Installation




The oil transfer pumps are positive displacement pumps. The motors are drip proof rated at 3/4 hp. The motors have sealed bearings and require minimal maintenance. All models come with hose, nozzle, 34 in. (864 mm) suction tube assembly, and bung adapter.

When unpacking check for shipping damage. Report any shipping damage to delivering carrier immediately. See **Parts**, page 8.

## Mounting Pump on Barrel or Tank

1. Install bung adapter (17) in barrel bung and tighten.
2. Assemble suction tube sections by applying PVC cement (supplied with your pump) to the inside diameter of the lower section of the suction tube (non-threaded section). Make sure PVC cement is applied to the complete diameter and slide the upper section (threaded section) into the lower section with a twisting motion.

 For tanks deeper than 36 in. (914 mm) you will need a standard 1 in. (25 mm) pipe with 1 in. npt threads on one end. If pumping used oil, install suction screen assembly, Part No. 260306, to filter large contaminants.

3. Apply pipe sealant and screw threaded end of suction tube into the pump inlet port (19). Make sure tube is tight.
4. Insert suction tube already attached to the pump through bung adapter and lower the pump onto the bung adapter. Position the pump as desired and tighten swivel nut (18) to the bung adapter (17).

## Mounting Hose and Nozzle

1. Before connecting hose to the pump, pour 8 oz (0.24 l) of oil in the pump outlet port so that the pump does not run dry during initial start-up.
2. Apply pipe sealant to male threads of the elbow (14) and screw the elbow into the outlet port.
3. Apply pipe sealant to one end of hose assembly and screw hose end into the elbow (14).
4. Apply pipe sealant to other end of hose assembly and screw the nozzle onto the hose.



## Electrical Installation 115 VAC and 230 VAC




The 115 VAC models (260101 and 260102) come wired with a short power cord and a grounded electrical plug. Power to the unit must be 115 VAC single phase. If an extension cord is required, it should be a 3-wire cord with a ground. Use a 20 amp circuit to supply power to the pump.

## Operation

### CAUTION

Do not operate pump dry. Do not run pump for more than 5 minutes with nozzle closed.

 See **Parts**, page 8 for items referenced in parentheses, i.e., (15).

1. On/Off switch (15) is located on the motor. Move switch (15) to ON position.
2. Insert nozzle into container or fill tube of vehicle being serviced and open nozzle to dispense fluid.
3. Close nozzle to stop flow. The pump has an internal bypass valve that will bypass the fluid internally with nozzle closed.
4. Immediately after dispensing, turn switch (15) to OFF position.


The 230 VAC model (260104) is shipped with a power cord but no plug. Purchase an appropriate plug that meets all local electrical codes and attach it to the end of the cord.

## Electrical Installation 12 VDC

The 12 VDC model (260100) is not shipped with a power cord since the installation will determine the length of the power cord.

1. Use a 2-wire 10 gauge conductor to the

## Pressure Relief Procedure



1. Verify pump switch (15) is OFF.
2. Open nozzle to relieve any residual pressure.



# Troubleshooting

Problem	Cause	Solution
Motor runs but pump will not prime.	Motor rotation wrong. (260100 only)	Check wiring instructions for possible problems.
	Missing relief valve o-ring seal	Remove gear cover inspect seal, replace if missing or damaged.
	Sheared drive key.	Remove cover and inspect key, replace if worn or sheared.
	Dirt under pressure relief valve or seal.	Remove pressure relief valve and inspect, clean, or replace if damaged.
	Worn or damaged gears.	Remove cover and inspect gears. Replace if worn or damaged.
	Oil level low.	Refill tank.
	Cover seal damaged.	Replace if worn or damaged.
	Inlet strainer clogged.	Remove and clean or replace.
	Air leak in suction tube.	Inspect all joints in suction tube, make sure all joints have sealant applied.
	Air lock in system.	This may occur if filter or meter or automatic shut-off nozzle is used. If this occurs, fill pump and meter with fluid through top of pump.
	Motor does not run at proper speed.	Check electric connections. Ensure supply voltage is at proper level.
Oil leaking in motor mount.	Faulty or damaged motor shaft seal.	Replace shaft seal
	Operating pump extended time with nozzle closed.	Do not exceed 5 minutes of operation with nozzle closed.
	Motor shaft worn.	Replace motor if shaft has groove worn in seal area.




Problem	Cause	Solution
Unit pumps but output flow is low.	Clogged inlet strainer (12).	Clean or replace.
	Air leak in suction tube.	Check to make sure all joints in suction tube are sealed.
	Suction tube too close to tank bottom.	Suction tube must have a 2 in. (51 mm) minimum clearance.
	Tank empty.	Refill tank.
	Tank not vented.	Tank must be vented to atmosphere.
	Worn or damaged gears.	Remove cover and inspect gears. Replace if worn or damaged.
	Damaged motor.	Replace motor.
	Clogged suction tube, hose, or nozzle.	Inspect and clean.
Motor stalls when nozzle is closed.	Bypass relief valve is stuck.	Inspect relief valve, making sure ball is free. Replace if damaged.
	Low supply voltage.	Check supply voltage.
	Gears damaged and binding.	Inspect gears. Gears should turn freely. Replace if damaged.
	Faulty motor.	Replace motor.
Motor overheating.	Gears binding.	Check to make sure gears turn freely on shaft.
	Operating pump extended time with nozzle closed.	Do not exceed 5 minutes of operation with nozzle closed.
	Clogged strainer.	Clean or replace.
	Clogged suction tube, hose, or nozzle.	Inspect and clean if required.
	Operating pump more than 30 minutes continuous duty.	Limit operation to 30 minutes per hour.
Switch will not turn pump on.	Blown fuse.	Replace fuse.
	Electrical problem.	Check that supply voltage is proper and getting to pump.
	Defective switch.	Check and replace if defective.
	Damaged or defective motor.	Check motor, replace if damaged or defective.



# Parts

**Model 260100, 12 VDC**  
**Model 260101, 115 VAC**

**Model 260102, 115 VAC**  
**Model 260104, 230 VAC**

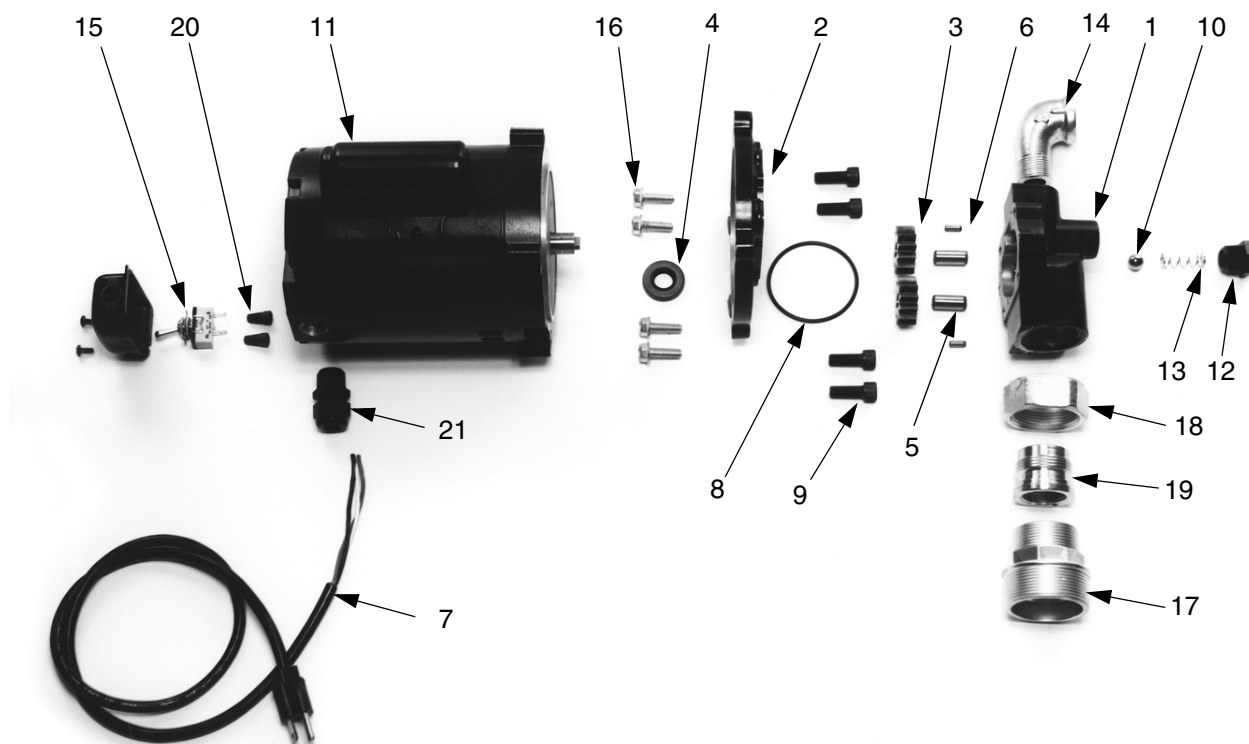



Ref. No.	Description	Qty.	Ref. No.	Description	Qty.
1	PUMP BODY	1	14	ELBOW, street, 3/4 npt	1
2	ADAPTER, pump motor	1	15	SWITCH	1
3	GEAR, pump	2	16	SCREW, cap, 5/16-18	4
4	SEAL, shaft	1	17	ADAPTER, bung	1
5	SHAFT, gear	2	18	NUT, swivel	1
6	PIN, dowel, 3/16 x 1/2	2	19	FITTING, inlet	1
7	POWER CORD with plug (115 VAC) POWER CORD no plug (230 VAC)	1	20	NUT, wire	2
8	O-RING	1	21	STRAIN RELIEF	1
9	SCREW, 3/8-16 sh cap	4	22	NOZZLE (not shown)	1
10	BALL, relief valve	1	23	TUBE, suction (not shown)	1
11a	MOTOR, 115 VAC	1	24	HOSE, petroleum (not shown)	1
11b	MOTOR, 115 VAC, 8 gpm	1	25	PIN, dowel, steel, 3/8 x 3/4 (not shown)	1
11c	MOTOR, 230 VAC	1	26▲	LABEL, warning (not shown) Part no. 15G901	1
11d	MOTOR, 12 VDC	1			
12	PLUG, 1/2 npt	1			
13a	SPRING, relief valve 115 VAC, 230 VAC, 12 VDC	1			
13b	SPRING, relief valve 115 VAC, 8 gpm	1			

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

## Kits

Kit Number	Description	Includes Items
260495	KIT, fluid, 115 VAC, 230 VAC, 12 VDC	1, 2, 3, 4, 5, 6, 8, 10, 12, 13a, 16, 25
260496	KIT, fluid, 115 VAC, 8 gpm	1, 2, 3, 4, 5, 6, 8, 10, 12, 13b, 16, 25
260497	KIT, motor, 115 VAC	11a
260498	KIT, motor, 115 VAC, 8 gpm	11b
260499	KIT, motor, 230 VAC	11c
260500	KIT, motor, 12 VDC	11d



# Technical Data

Maximum Working Pressure	65 psi (0.45 MPa, 4.5 bar)
Automatic Relief Setting	260100, 260101, 260104: 65 psi (0.45 MPa, 4.5 bar)
	260102: 50 psi (0.45 MPa, 4.5 bar)
Output Flow	260100, 260101, 260104: 4.25 gpm (16.15 lpm)
	260102*: 8.0 gpm (30.3 lpm)
Inlet Size	1 in. npt
Outlet Size	3/4 in. npt
Weight	260100: 34 lb (15.3 kg)
	260101, 260102, 260104: 25 lb (11.25 kg)
Voltage/current	260100: 12 VDC, 35 Amps
	260101, 260102: 115 VAC, 60 Hz, 9.2 Amps
	260104: 230 VAC, 50/60 Hz, 4 Amps
Power Cord	260101, 260102 only: 30 in. (762 mm)
Hose size	8 ft (2.4 m), 3/4 in. (19 mm) ID
Suction tube	34 in. (864 mm)
Wetted parts	carbon steel with zinc plating, stainless steel, galvanized steel, aluminum, nitrile, rubber, PVC, PVC cement

*\*Model 260102 is intended for use with fluid viscosities of 1000 centistokes (5000 ssu) or less.  
For fluids with viscosities greater than 1000 centistokes use pump model 260101.*





Technical drawing area with horizontal lines for sketching.



# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Information

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the nearest distributor.

**Phone:** 612-623-6928 or **Toll Free:** 1-800-533-9655, **Fax:** 612-378-3590

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

MM 311305

**Graco Headquarters:** Minneapolis  
**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

[www.graco.com](http://www.graco.com)

Printed in USA 311305A

11/2005